

UNIVERSAL CONDENSER KIT

This condenser kit will replace most of the condensers that fit Auto-Lite distributors if they are mounted inside the distributor.

INSTALLATION

1. Remove the old condenser. Use the lead as a guide to select the proper hole in the copper strap.
2. Cut off the excess strap material about 1/16" beyond this hole.
3. Cut the insulating sleeve 1/2" shorter than the strap and install on the strap.

NOTE: If the old condenser has a slotted terminal cut away one side of the hole in the strap with a pair of side cutters.

4. Snap the bracket on the condenser making sure that the mounting flange is in the same position as on the old condenser.
5. Install the assembly in the distributor.

N-1542

UNIVERSAL CONDENSER KIT

This condenser kit will replace most of the condensers that fit Auto-Lite distributors if they are mounted inside the distributor.

INSTALLATION

1. Remove the old condenser. Use the lead as a guide to select the proper hole in the copper strap.
2. Cut off the excess strap material about 1/16" beyond this hole.
3. Cut the insulating sleeve 1/2" shorter than the strap and install on the strap.

NOTE: If the old condenser has a slotted terminal cut away one side of the hole in the strap with a pair of side cutters.

4. Snap the bracket on the condenser making sure that the mounting flange is in the same position as on the old condenser.
5. Install the assembly in the distributor.

N-1542

UNIVERSAL CONDENSER KIT

This condenser kit will replace most of the condensers that fit Auto-Lite distributors if they are mounted inside the distributor.

INSTALLATION

1. Remove the old condenser. Use the lead as a guide to select the proper hole in the copper strap.
2. Cut off the excess strap material about 1/16" beyond this hole.
3. Cut the insulating sleeve 1/2" shorter than the strap and install on the strap.

NOTE: If the old condenser has a slotted terminal cut away one side of the hole in the strap with a pair of side cutters.

4. Snap the bracket on the condenser making sure that the mounting flange is in the same position as on the old condenser.
5. Install the assembly in the distributor.

N-1542

UNIVERSAL CONDENSER KIT

This condenser kit will replace most of the condensers that fit Auto-Lite distributors if they are mounted inside the distributor.

INSTALLATION

1. Remove the old condenser. Use the lead as a guide to select the proper hole in the copper strap.
2. Cut off the excess strap material about 1/16" beyond this hole.
3. Cut the insulating sleeve 1/2" shorter than the strap and install on the strap.

NOTE: If the old condenser has a slotted terminal cut away one side of the hole in the strap with a pair of side cutters.

4. Snap the bracket on the condenser making sure that the mounting flange is in the same position as on the old condenser.
5. Install the assembly in the distributor.

N-1542